
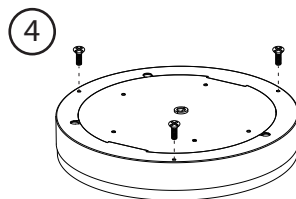
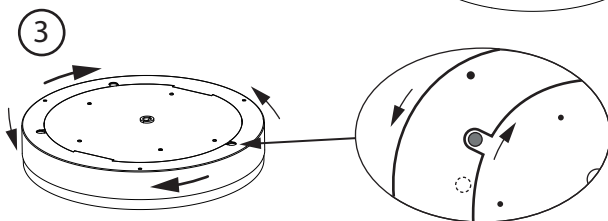


INSTRUKCJA MONTAŻU



PLC-290 / PLC-360

RAMKA PLC 290mm / RAMKA PLC 360mm

- ▶ PLC-290-LBL
- ▶ PLC-360-LBL
- ▶ PLC-290-LWH
- ▶ PLC-360-LWH

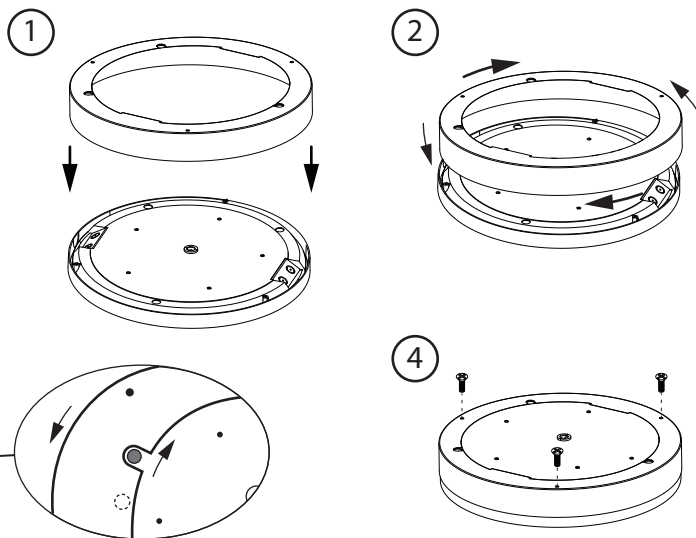

- ▶ PLC-290-HBL
- ▶ PLC-360-HBL
- ▶ PLC-290-HWH
- ▶ PLC-360-HWH

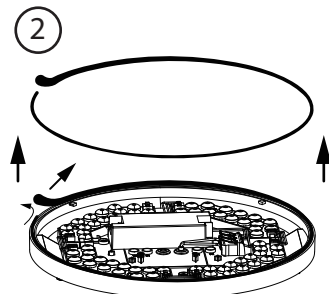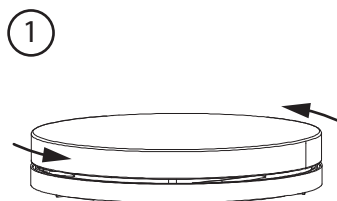

usuń uszczelkę / remove gasket

